



FIXTURE MOUNTING:



- Disconnect power supply and remove existing fixture (if applicable).
- The fixture will be supplied with the desired adapter and whip / power cord already fixed to the housing.
(6" Side Arm (SA6), 12" Side Arm (SA12), 6" Wall Mount (WM6))
- Mount fixture to pole,.

SIDE ARM

- Drill bolt pattern into existing pole according to (Figure A)
- Loosen nuts and remove washers and lock washers from (2) side arm bolts.
- Slip the (2) bolts through the drilled holes, making sure the whip/power cord is pulled through the middle hole and through the pole.
- Replace lock washers, washers, and nuts, then tighten from inside the pole.
- Wire the whip/power cord to the existing power source.

WALL MOUNT



- Drill 4 hole bolt pattern into existing surface area according to (Figure B).
- Wire the whip/power cord to the existing power source.
- Secure 4 bolts through wall mount into existing surface.

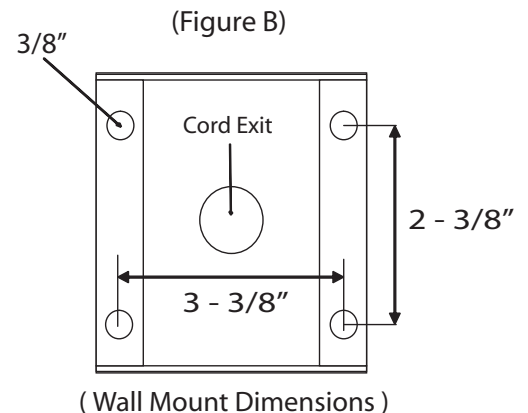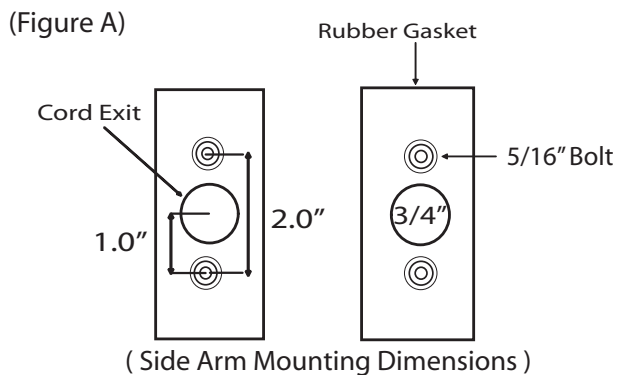

FIXTURE WIRING:

Note: For bulb and ballast wiring diagram, please see Figure C / D

Note: For 300W, 400W, & 500W, dual bulb & ballasts are used (Figure D)

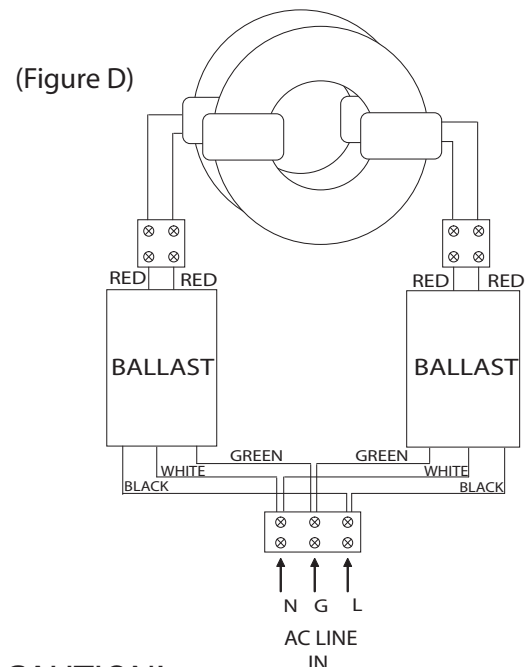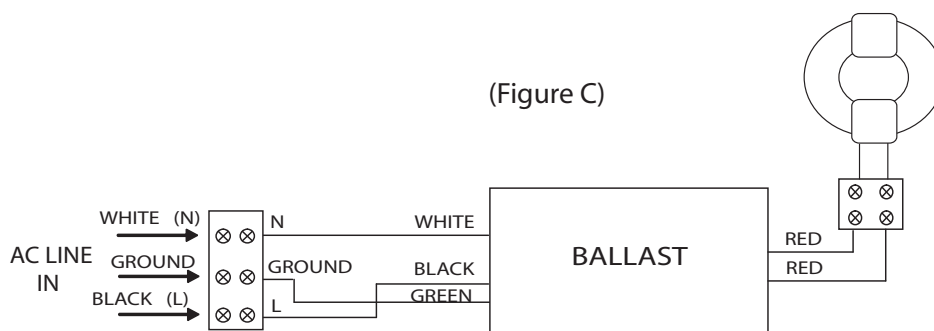

NEPTUN Light, Inc.
Questions and Comments:
service@neptunlight.com
Toll-Free: 1-888-735-8330

CAUTION!

DISCONNECT POWER SUPPLY BEFORE INSTALLATION OR MAINTENANCE.
INSTALLATION OF THIS PRODUCT SHOULD BE DONE BY A FULLY QUALIFIED AND
LICENSED ELECTRICIAN OR TECHNICIAN.